

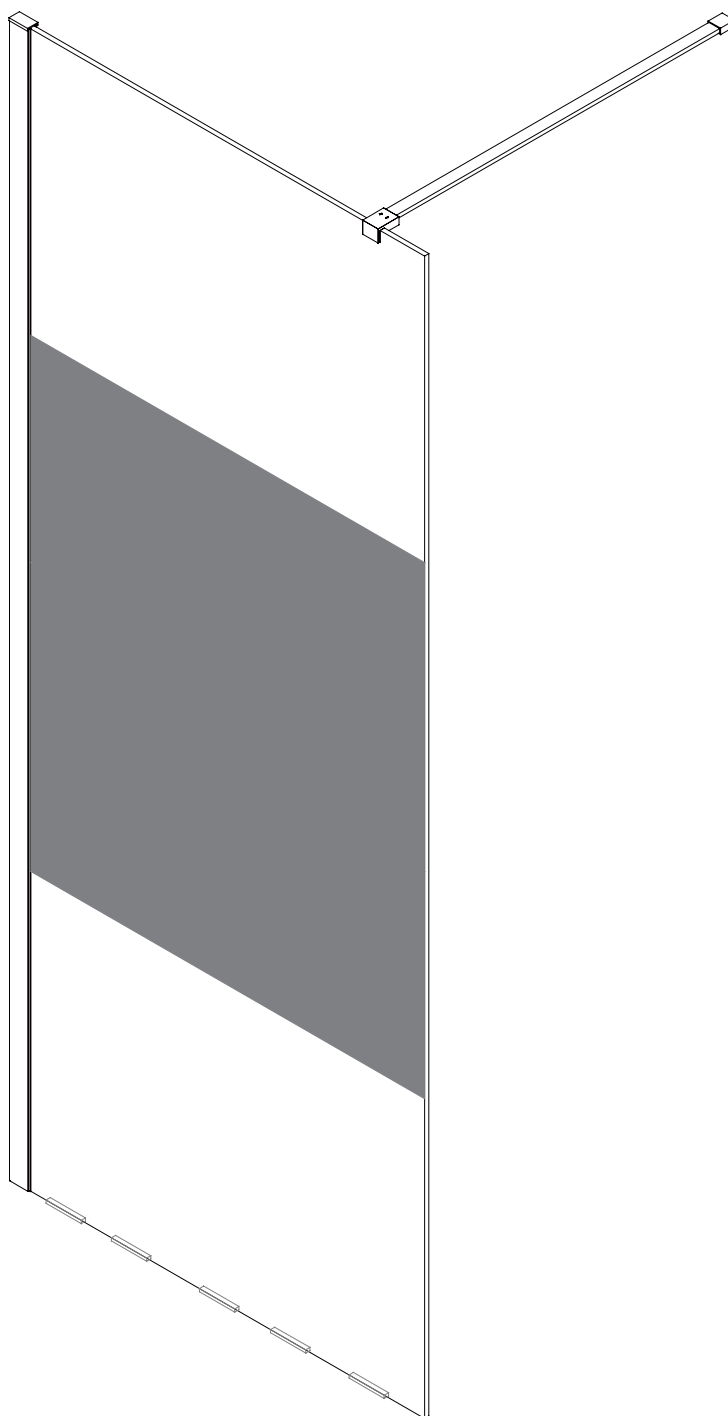
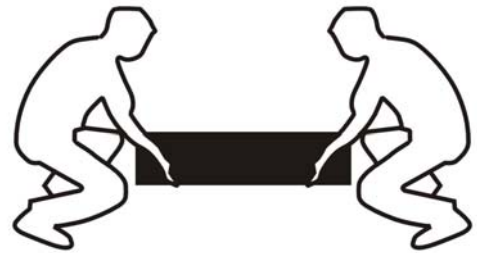
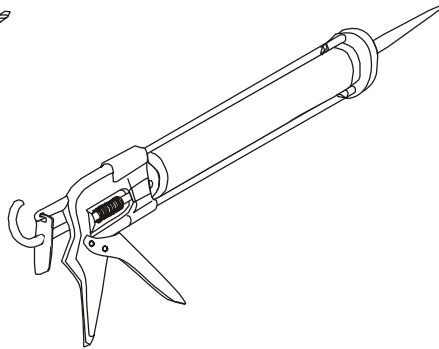
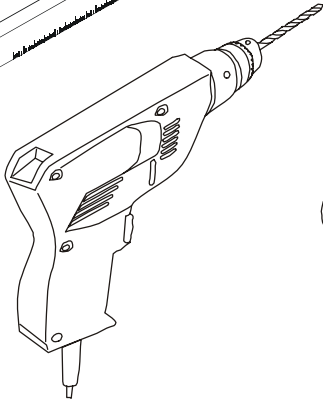
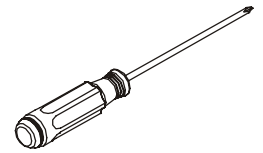


Side glass

Installation instructions















(For 2120-60S/70S/80S/90S/100S/110S/120S/130S/140S)




























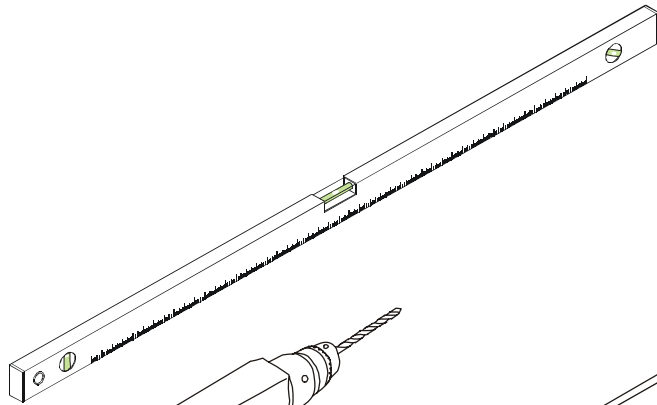


1



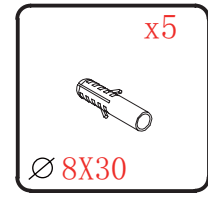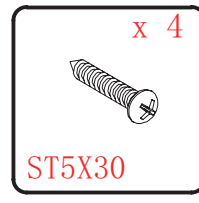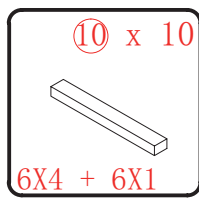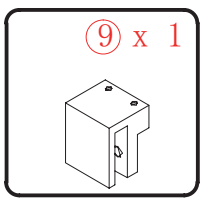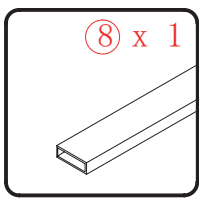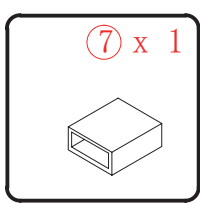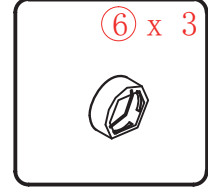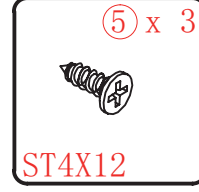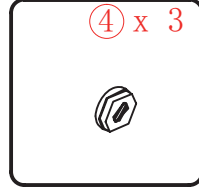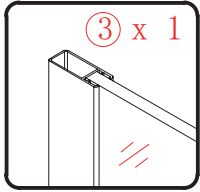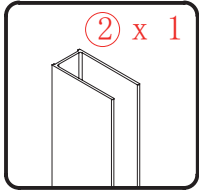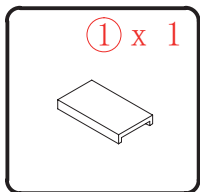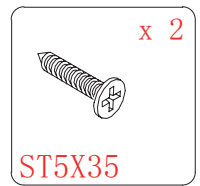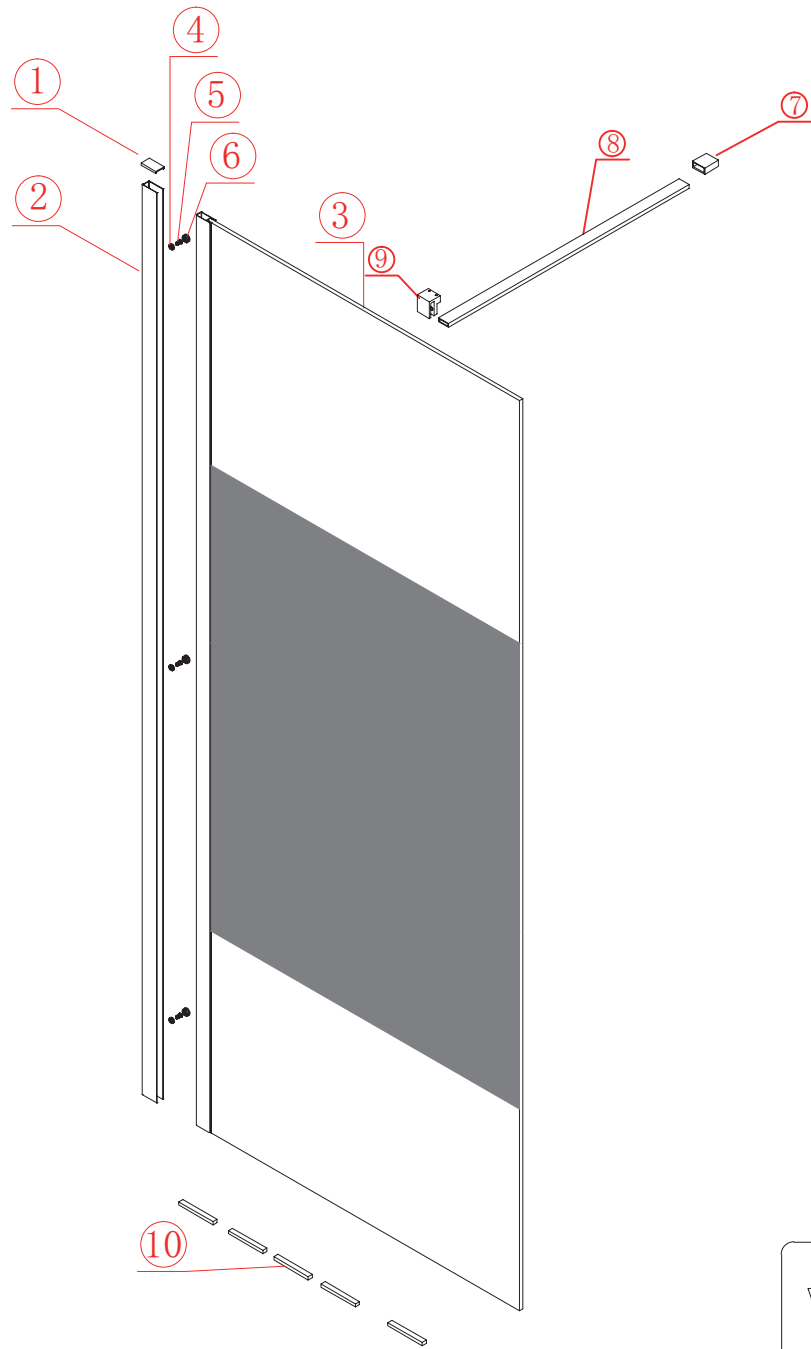

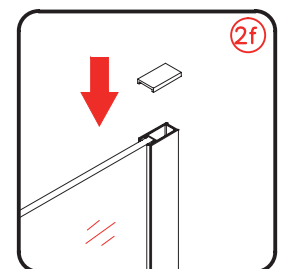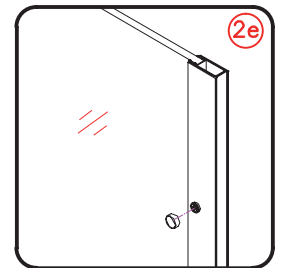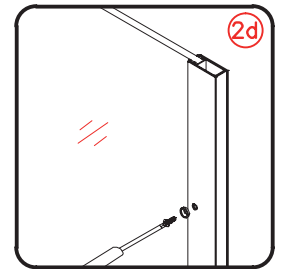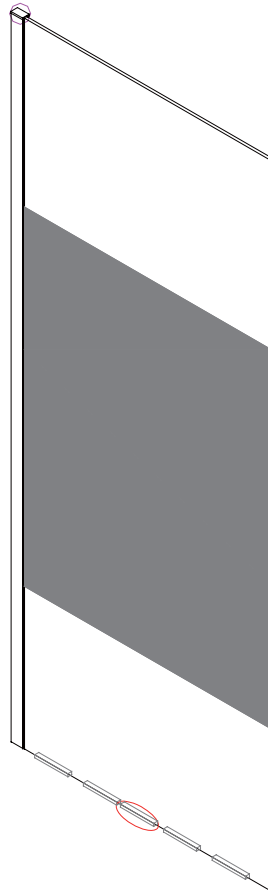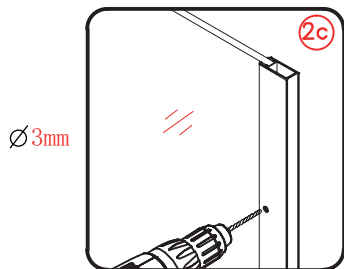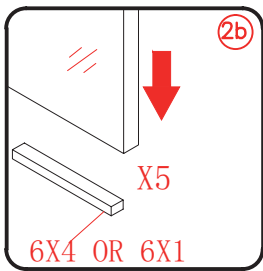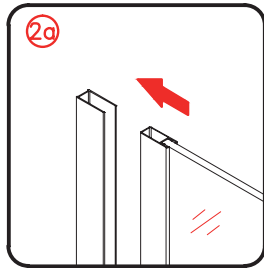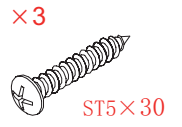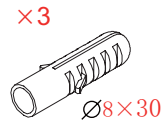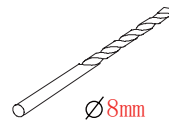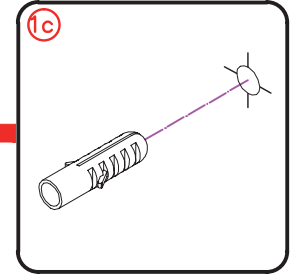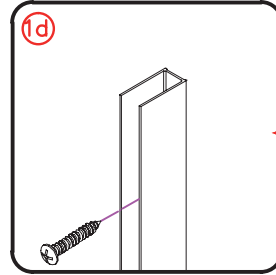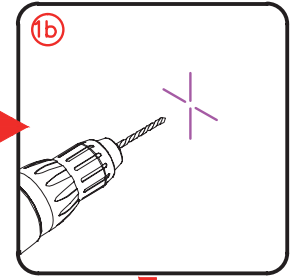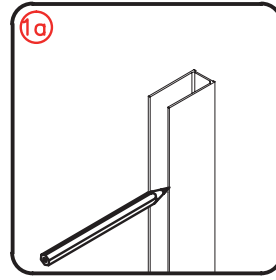

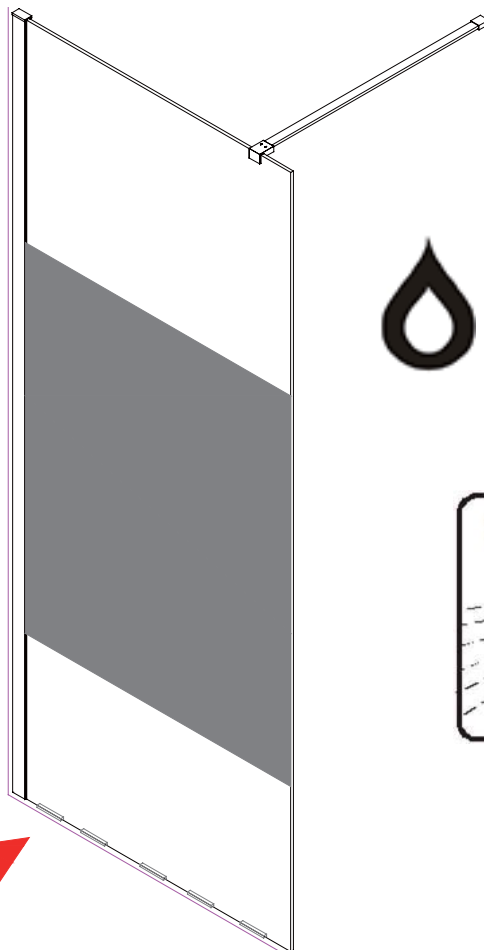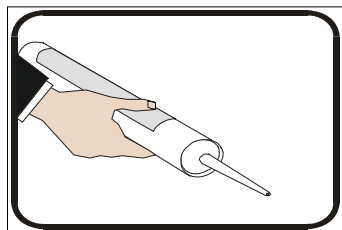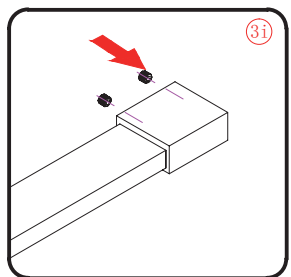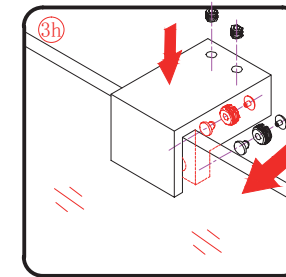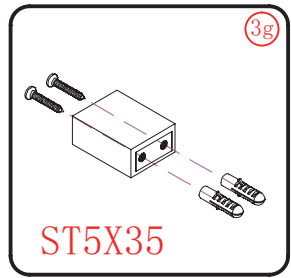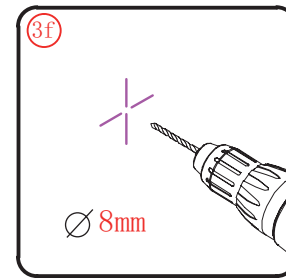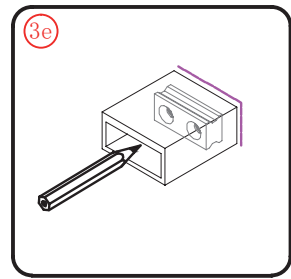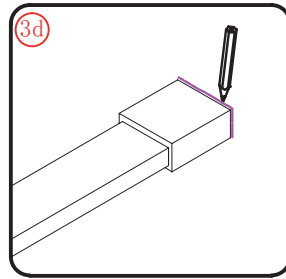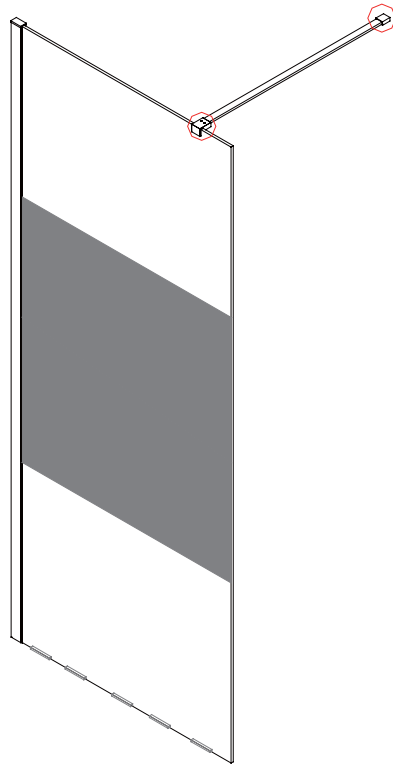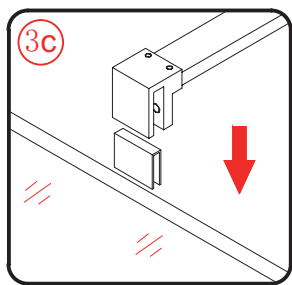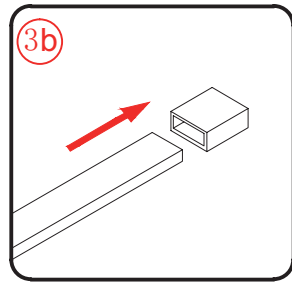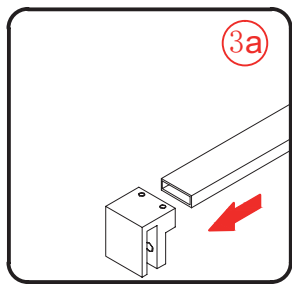

Coated Glass

